

Connection/ Wiring Diagrams

"Y" Start: "Delta" Run


Speed: Single

Phase: 3

Voltage: Single voltage only

Winding: "Y" Start; "Delta" Run (Star Start - Delta Run)

Note: Usually used on larger HP units to reduce starting current and torque or where customer has limited power capacity. Furnished only when specified - specify operating voltage.

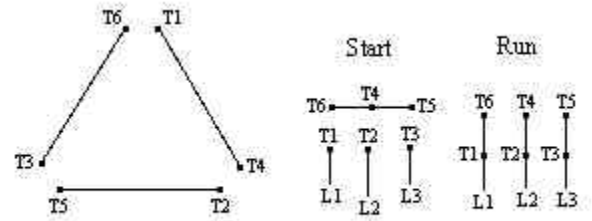

[Home](#) [Email](#)

Copyright © 2000 U.S. Electrical Motors, All rights reserved